


DRAINING PROCEDURE:

SWABBING OUTLET TO BE PUMPED OUT BY REGION OF PEEL OPERATIONS STAFF AFTER EACH USE TO PREVENT FREEZING.

NOTE: THE FRAME AND COVER IS INTENDED TO PROVIDE ACCESS FOR SWABBING CONNECTION ONLY. IF ACCESS INTO THE 1200Ø RISER IS REQUIRED THEN THE ENTIRE FLAT CAP WOULD BE REMOVED.

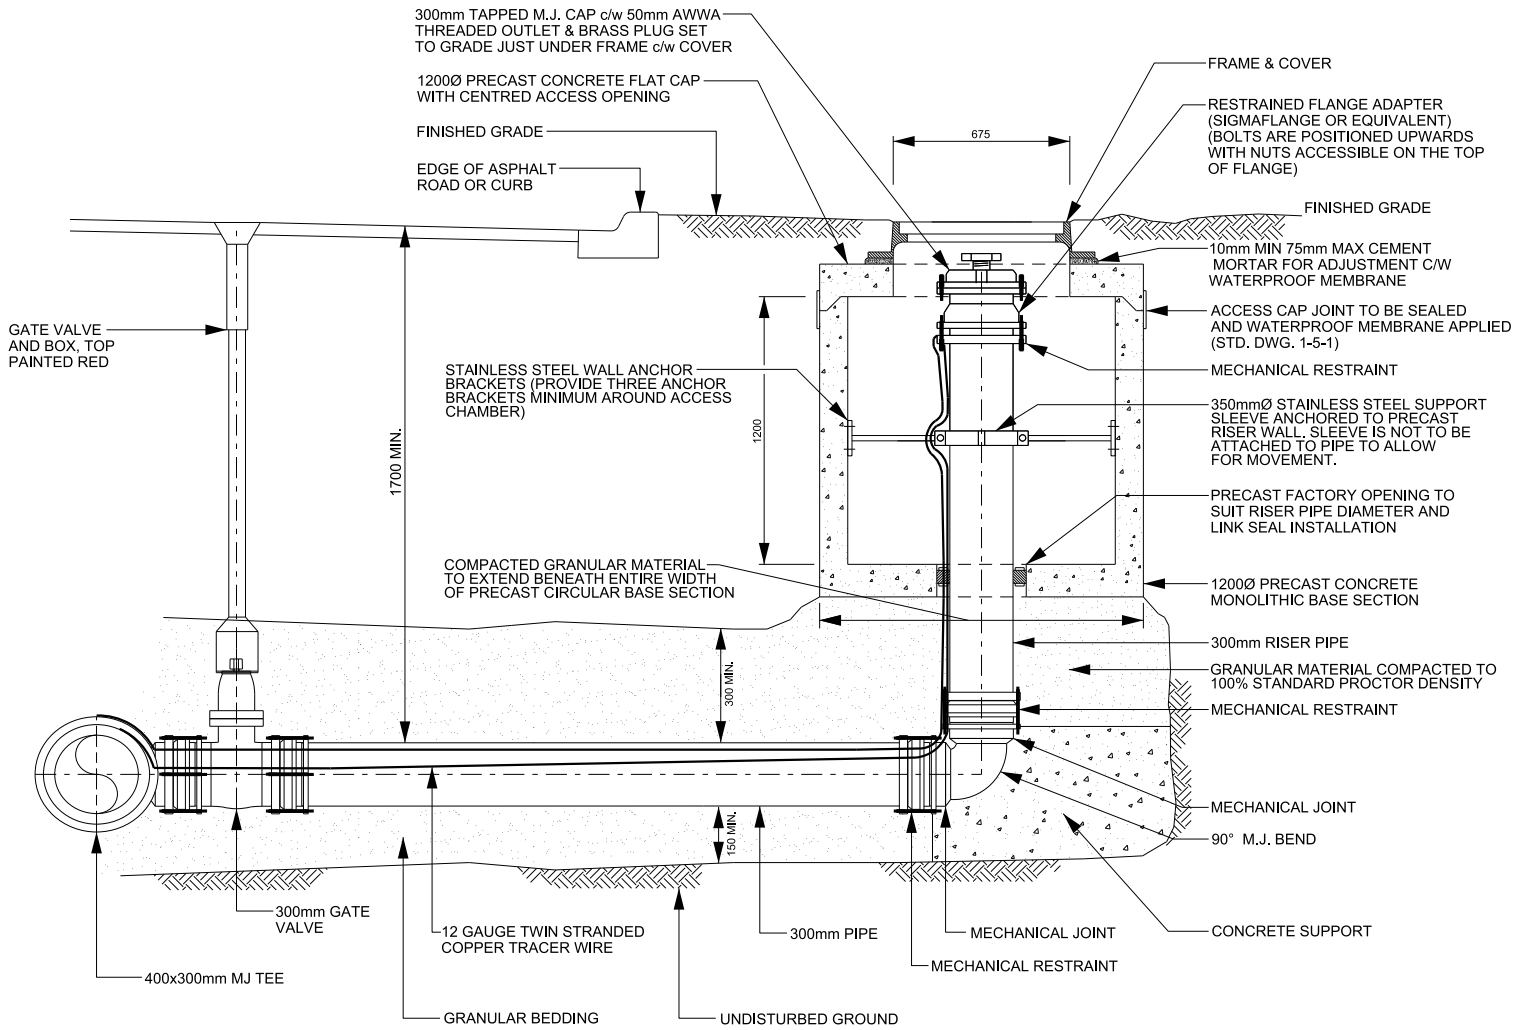

NOTE

1. STAINLESS STEEL SUPPORT SLEEVE MUST BE INSTALLED ON VERTICAL RISER PIPE.
2. ALL VALVES & FITTINGS TO HAVE MECHANICAL THRUST RESTRAINT. CONCRETE THRUST BLOCKING IS NOT ALLOWED.
3. ALL PIPING, FITTINGS, VALVES, APPURTENANCES AND MECHANICAL RESTRAINTS TO BE c/w DENSO PASTE, DENSO MASTIC AND DENSO TAPE OR APPROVED EQUAL, APPLIED TO MANUFACTURER'S RECOMMENDATIONS.
4. TO BE DRAINED AFTER EACH USE (SEE DRAINING PROCEDURE NOTE).
5. ALL BOLTS WILL BE STAINLESS STEEL (304).
6. PROVIDE WATERPROOFING AND JOINT SEALANT ON PRECAST ACCESS CHAMBER AND FRAME AND COVER AS PER STD. DWG. 1-1-5.